

Subject: : Beginner Forum

Topic: : Click pawl

Re: Click pawl

Author: : Six-Gun

Date: : 2013/9/16 14:30:51

URL:

Yeah, it sounds like either the drag is set too low or (like Sasquatch said) the clicker is broken. In either case, a lack of friction on the spool is allowing the reel to get going too fast and "overrun" - the line gets going and starts jumping over itself. Same problem happens in the baitcasting reel world when you don't set your drag properly.