

---

Subject: : Warm Water & Salt Water Fly-Fishing

Topic: : Smallmouth set up

Re: Smallmouth set up

Author: : afishinado

Date: : 2014/2/16 16:22:59

URL:

Quote:

poopdeck wrote:

Afish, I have read your post on mono twisted leaders, I think. If I am correct you tie different lb test together and then twist the different legs together. If this is correct, aren't you making a tapered furred mono leader just with more knots in it?

I have furred mono leaders and they do seem a bit stiff so I have also been experimenting with thread leaders with a single strand mono core. All the snow keeps me indoors so I have yet to put the mono or mono core leaders on a rod to try out.

PD,

Single diameter mono line twisted together and over each other to get a taper. Easier to actually do than explain.

**Attach file:**


---

 **Furred leaders Afish MOD.jpg** (99.15 KB)

# Furled Leader Instructions

1-3 wt - 2 lb Est Mono  
 4-5 wt - 4 lb Est Mono  
 6-7 wt - 6 lb Est Mono  
 8-10 wt - 8-10 lb Est Mono

Two main strands furled (twisted) together from 2 long strands of mono

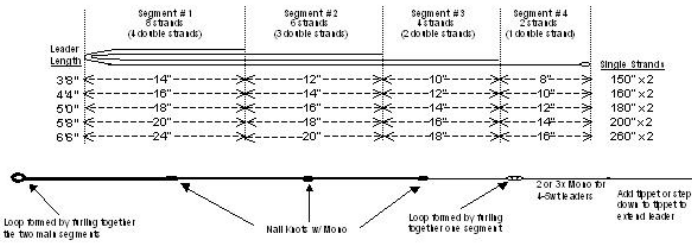

The lengths for each leader are listed above on the far right of the second diagram. Peel off two long segments of mono and match up the tips. Go to the loop end and furl them together by twisting each strand IN THE SAME DIRECTION. Work you way to the end and put an overhead knot in it to hold it together. Do the same for the second segment. You now have two main strands as shown above in the top diagram.

Stagger the two strands to allow for segment # 4 and attach the strands together with a thin strip of masking tape to hold them together (see top diagram). For example if the last segment is 12', overlap leaving 9' at the end to allow room for making for the knot. Furl the 2 strands together IN THE OPPOSITE DIRECTION of the first furl (this tightens the furl you already have). You now have a single strand furled together.

Measure out the strand to the finished leader length and add 1 1/2' to allow for the knots reducing the overall length, and fold over at this point (see second diagram). Folding over the leader and furling forms the butt-end loop. Furl IN THE OPPOSITE DIRECTION of the last furl. Measure out segment # 4 and tie a triple surgeons knot at that point. Tip: use an overhead knot and move it up and down until the measurement is correct, and insert tag two more times to make a triple surgeons knot and tighten. Unfurl any excess line forward of the knot. Cut excess but leave the longer single strand and furl together to form segment # 2. Measure for segment # 2 and tie knot at that point as before, and trim excess. Furl the remaining line and measure for segment # 3. Tie knot and trim excess.

You now have a 4 segment tapered leader that will turn over flies. Add mono with a loop. 10-12" of 2-3x mono works well for a 4-Strt leader. Use heavier mono for heavier leaders. You can add your tiplet from there or step down with progressively thinner mono to lengthen your leader. The leader butts work well up to 120% of butt length. In other words a 5' furled leader can be used for up to 11' finished leader if stepped down.

I usually coat with Knot Sense the base of both loops and the first two nail knots to allow it to more easily slide through the flytop. You can also use triple surgeons knots or whip finish with thread instead of using nail knots to bind together each segment.